


Installation Instructions





Slide rails into corner brackets.



Use T-connectors to add additional length



Spray paintable with Krylon Fusion



Apply KederTape to edges of fabric



Tuck fabric with Keder Tape into rail slot



Drill screws through corner pieces or mounting brackets into wall studs



Hang and level frame on wall



No mitered corners. All straight cut sides.



Scan QR Code to watch Instructional Video





Easy to cut custom sizes. Use chop saw or hand saw.

For more information visit www.bannerups.com/segdesign



MAKE SEG SIGNS WITHOUT SEWING!


800-869-9601



www.bannerups.com/kedertape



The fold over method folds the keder over so that the adhesive is completely encased and locked in place. This ensures a secure durable installation even with fabrics that have lower adhesion levels to KederTape, or when higher tension are desired.

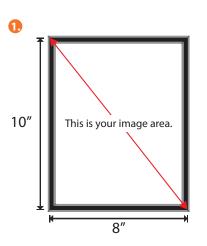


Measure frame size using the outer edge of the frame slot.



On back of fabric align outer edge of KederTape with outer edge of the cut fabric. Lightly press KederTape on fabric. Placing wider will loosen the graphic when installed; placing it narrower will tighten.



Scan OR Code to watch Instructional Video

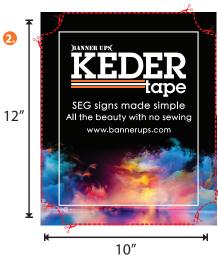

Cut graphic a minimum of 1" larger than the image area on all sides. Visit website for printing templates



Fold KederTape so that the fabric is on both sides of the keder. Test fit the graphic. If needed peel back and reposition to achieve desired level of tension. Your graphic is now ready to install.

For KederTape printing templates visit www.bannerups.com/kedertemplate

BANNER UPS



INSTALLATION **INSTRUCTIONS**

SEG SIMPLY BEAUTIFUL



- Easy no-tool assembly
- Available in standard sizes
- Modular system combine rails, corners, and T-connectors to create unlimited sizes and shapes
- Easy to cut for custom sizes
- Paintable! Add color with Krylon Fusion spray paint
- MADE

800-869-9601 www.bannerups.com/segdesign